

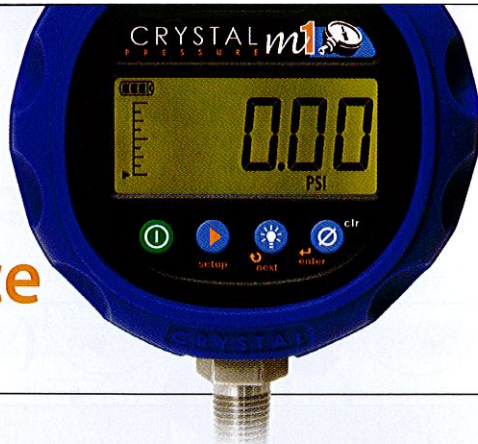


359B.


 
m1 Quick Reference

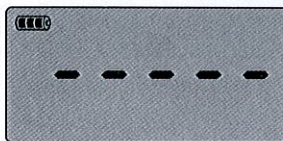


Power On

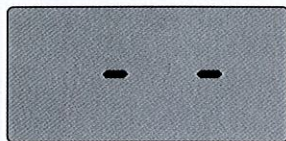


Zero

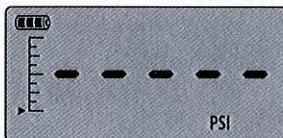

Backlight

 


Power Off

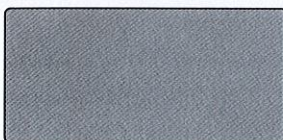


CRYSTAL
engineering corporation

Note: Pressing the **enter** button always returns the gauge to operating mode. If you want to set multiple Display Functions, press the **setup** button to navigate from one Display Function to the next, then press the **enter** button when you are done.

Gauge Setup Basics

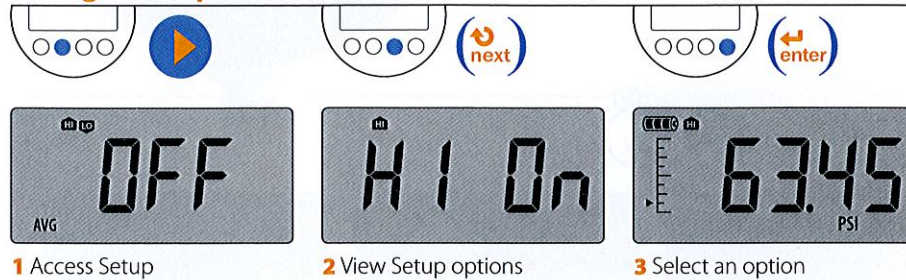


Gauge Setup Map

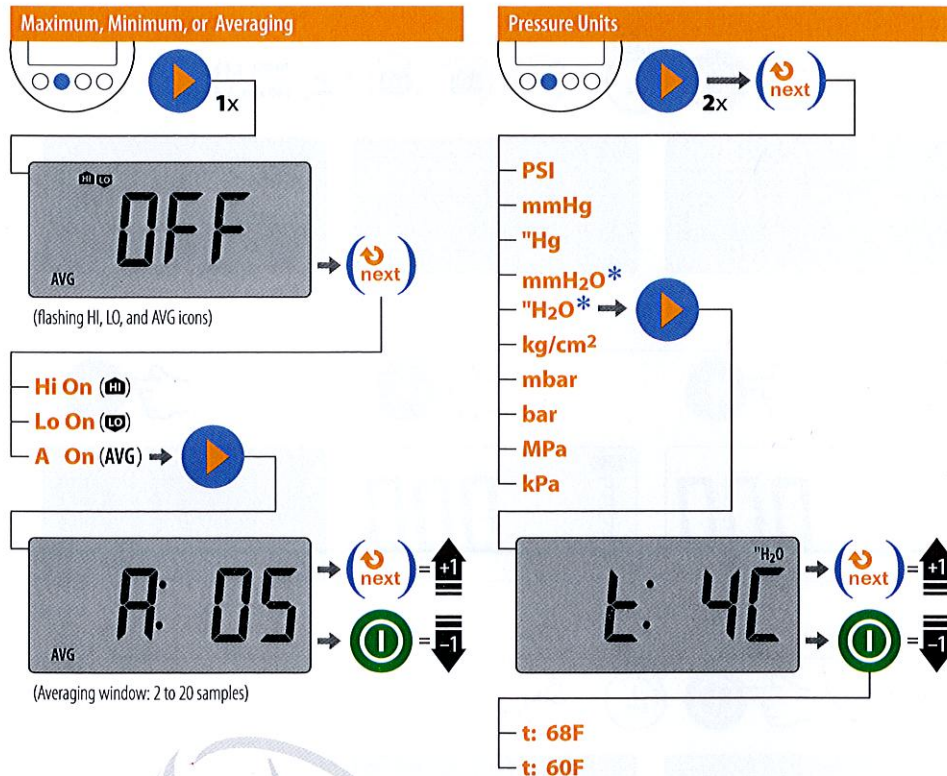

All units are not available with every pressure range.
 * H₂O icons and temperature settings will only display on H₂O enabled units.

Gauge Setup Map continued

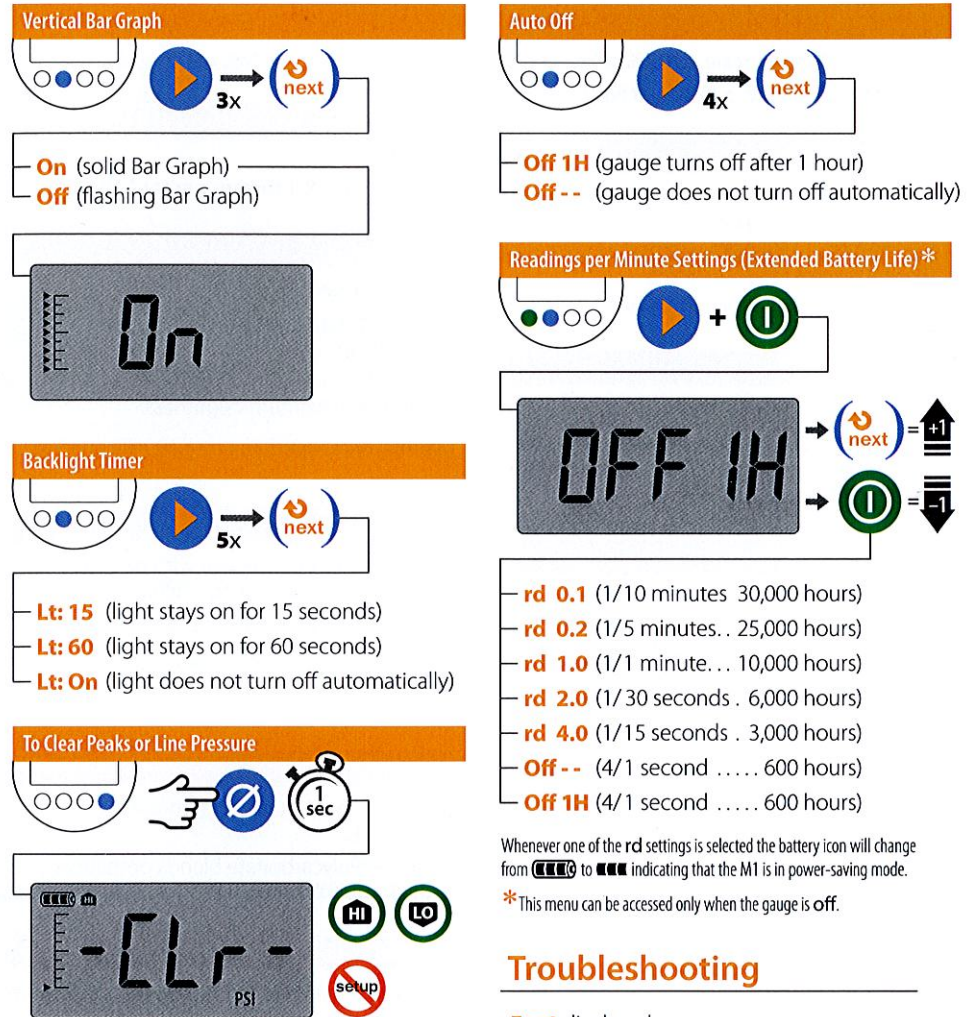

Troubleshooting

Err 1 displayed:
 The M1 checks the internal calibration every time it's turned on. Contact factory for further instructions.


Err 2 displayed:
 The M1 has tried to display a number too large for the display due to electrical malfunction or numerical error. Contact factory for further instructions.

Err 5 or Err 6 displayed:
 The XP2i pressure sensor is exhibiting behavior out of normal operating condition. Contact factory for sensor replacement.



Note: If there is no gauge activity for 10 seconds, the gauge will return to operating mode. Any Setup options that you have selected will be enabled.

359B.


m1 Quick Reference

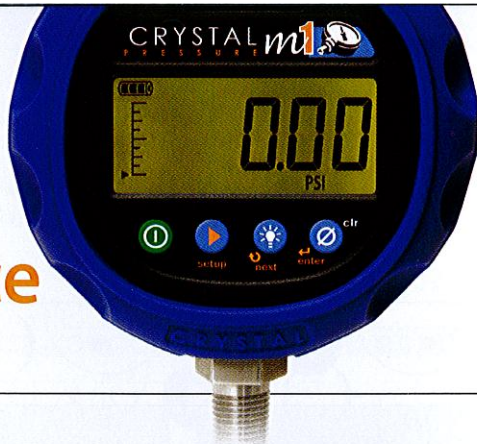


Power On

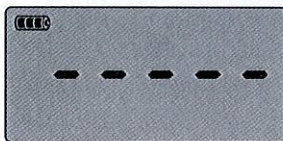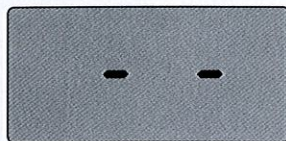


Zero

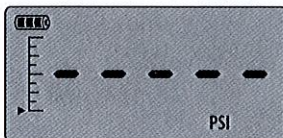

Backlight

 

Power Off

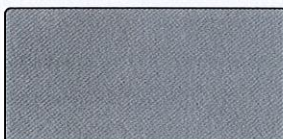

CRYSTAL
engineering corporation